

Blue sky Latch C-172 Installation Instructions

Parts List:

(4) 4-4 Cherry max rivets



(2) Support Washers



(2) door catches



(1) Left stem assembly

(1) Right stem assembly

(2) 4-6 Rivets



From this:



To this:



1. Installing the door catch. Drill out the rivets using a 1/8" drill. Remove the old hardware.




2. Insert support washer into the catch.



3. Using supplied 4-4 Cherry max rivet place the catch into position. Pull rivet into place. Repeat for the other rivet hole. Do this for both the left and right doors.



4. Assemble the Wing Stems using 4-06 cherry max rivet. Make sure you get the right and left correct.

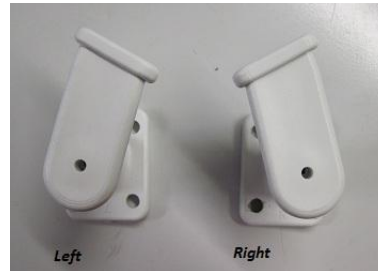

Suggest you hold them in place to check right and left pattern prior to riveting.

5. Remove old wing stems and replace them with the new ones. Note there are right and left parts corresponding to your right (passenger) and left (pilot) doors.
6. The Wing stem can be painted, it is optional.
7. Enjoy your new Blue Sky latch system.