


INSTALLATION FOR ALL EX CATCHERS

Go to www.rackemmf.com or www.packemracks.com

to see installation video for the EX catchers.

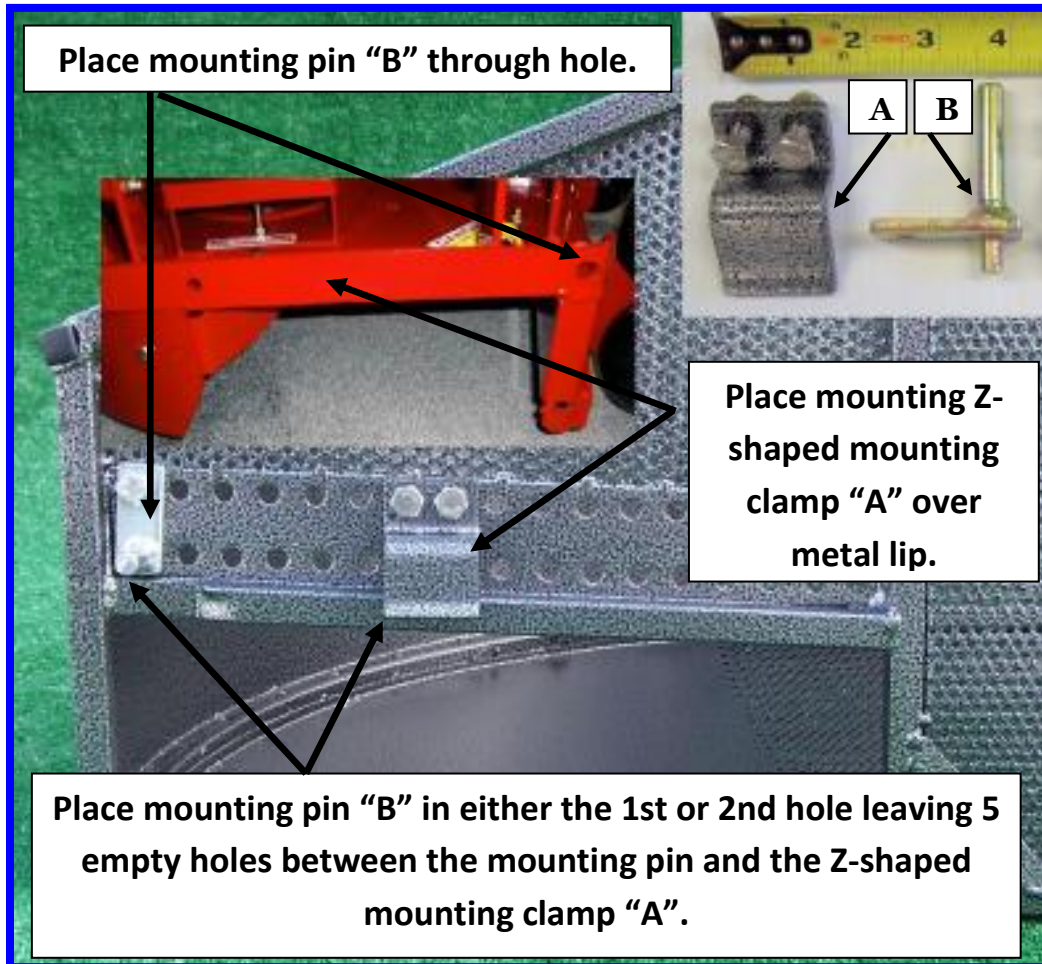

Bracket "A" should be bolted to the catcher towards the rear. Far enough back to clear the ears that hold the deflector, approximately hole 7 & 8. Bracket "A" slides down on the vertical piece of steel that the deflector ears are welded to.

Bracket "B" should be bolted to the catcher towards the front, in either hole 1 or 2. The vertical piece of steel with the deflector ears welded to it (Just above the discharge opening on top of the deck) has a predrilled hole in it towards the front of the mower. Bolt bracket "B" in such a position so the large pin will engage this hole.

To install the catcher on the mower: Engage the large pin of Bracket "B" into the predrilled hole in the vertical piece of steel with the deflector ears welded to it, and then rotate the catcher down so Bracket "A" engages that same piece of steel with deflector ears.