

## CAFÉ Dome & CASCADE Awning Installation Instructions

Thank you for choosing Awnings.com, a division of Eide Industries, Inc.

**Careful planning and patience are the keys to a safe and successful installation. Please review all steps of these instructions before beginning the assembly and installation of the canvas awning. If you are not able to perform this installation and/or do not have the appropriate equipment and tools, we recommend hiring a local handyman or contractor for assistance.**

### PARTS LIST

- Awning Frame - Pre-assembled
- Sunbrella Fabric Cover - Pre-assembled
- Two Wing Stop Support Arms - Pre-assembled
- Two Aluminum Support Bars - Provided with Fixed Stationary Awnings.
- U-Shaped Mounting Brackets - Quantity varies depending upon awning size.
- Hex Screws 5/16" x 1" - Quantity varies depending upon awning size.
- Hex Screws 5/16" x 2" - Quantity varies depending upon awning size.

### NECESSARY INSTALLATION TOOLS

- Drill Motor and 5/16" Drill Bit
- Ladder
- Level
- Pencil or Marking Tool
- Hex Bit and Socket Set
- Tape Measure
- Silicon Weather Sealant

### GENERAL COMMENTS

- For maximum efficiency and ease of installation, a second person is recommended to assist in holding the frame in place while measuring, marking and fastening the awning to the wall.
- For best appearances, it is recommended to mount the fixed/retractable awning over the center of the window or door opening.
- **Please allow enough clearance for outward opening doors and windows.**
- Always be careful of the Sunbrella® Fabric during installation. Drills, ratchets, screwdrivers and other items can puncture the fabric. This and other customer installation damages are not covered by the warranty.
- Take your time planning and installing the new awning.

**PLEASE CAREFULLY READ INSTRUCTIONS PRIOR TO  
INSTALLATION.**

---

## **Assembly and Installation Instructions**

1. **Check inventory** to ensure all parts have been delivered. If parts are missing, please contact Awnings.com at 562-402-8335 extension 278 or send an email to [support@awnings.com](mailto:support@awnings.com).

- 
2. **Identify the construction of the wall** (i.e. stud and stucco, stud and wood siding, concrete, brick, etc.) If in doubt, consult with a contractor or hardware store for the best wall anchoring solutions suitable for your needs.

- 
3. **Measure the awning inner and outer frame Width** dimensions and mark the center point.



- 
4. **Measure the Width of the window or door opening** and mark the center point.



- 
5. **Identify the installation Height** by holding the frame against the wall and aligned with the center points.
-

- 
6. **Level the awning** and with a pencil, lightly trace the inside perimeter of the awning frame.



- 
7. **Mark where holes will be drilled** for the wall mounting brackets and the two bottom hinges. After marking, temporarily remove the frame from the wall.



- 
8. **Drill the holes** for the appropriate wall mounting bolt and anchoring hardware.

- 
9. **Fasten the U-Shaped Wall Mounting Brackets** to the wall using at least 5/16" x 2" screws. (Use anchors if necessary. *Do NOT fasten the bottom hinge screws yet.*)



- 
10. **Lift the awning into the mounted U-Shaped Brackets**, making sure the awning fits snugly and level as needed.




- 
11. **Once level, fasten the two 5/16" x 2" screws** into the two Bottom Hinges. (Anchors not necessary if attaching to wood.)



---

## RETRACTABLE Awnings

- Simply "lock-in" the built-in Wing Stop Support Arms on the awning.
- Install the Rope Cleat on the wall if desired. (Optional)

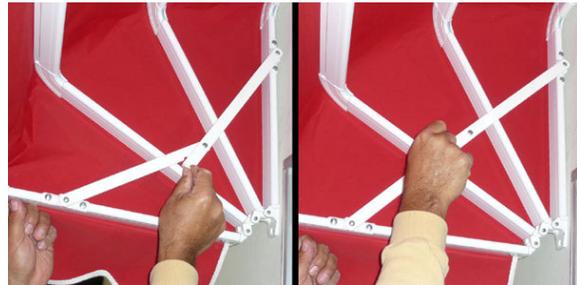

---

## FIXED Stationary Awnings (Optional)

- Attach the 3/16" x 1" flat aluminum Support Bars to the inside of the awning using the 5/16" x 1" Hex Screws provided.

---

**Thank you for choosing Awnings.com, a division of Eide Industries, Inc. If you have any questions, please call us at (562) 402-8335 ext. 278 or via email at [support@awnings.com](mailto:support@awnings.com).**