
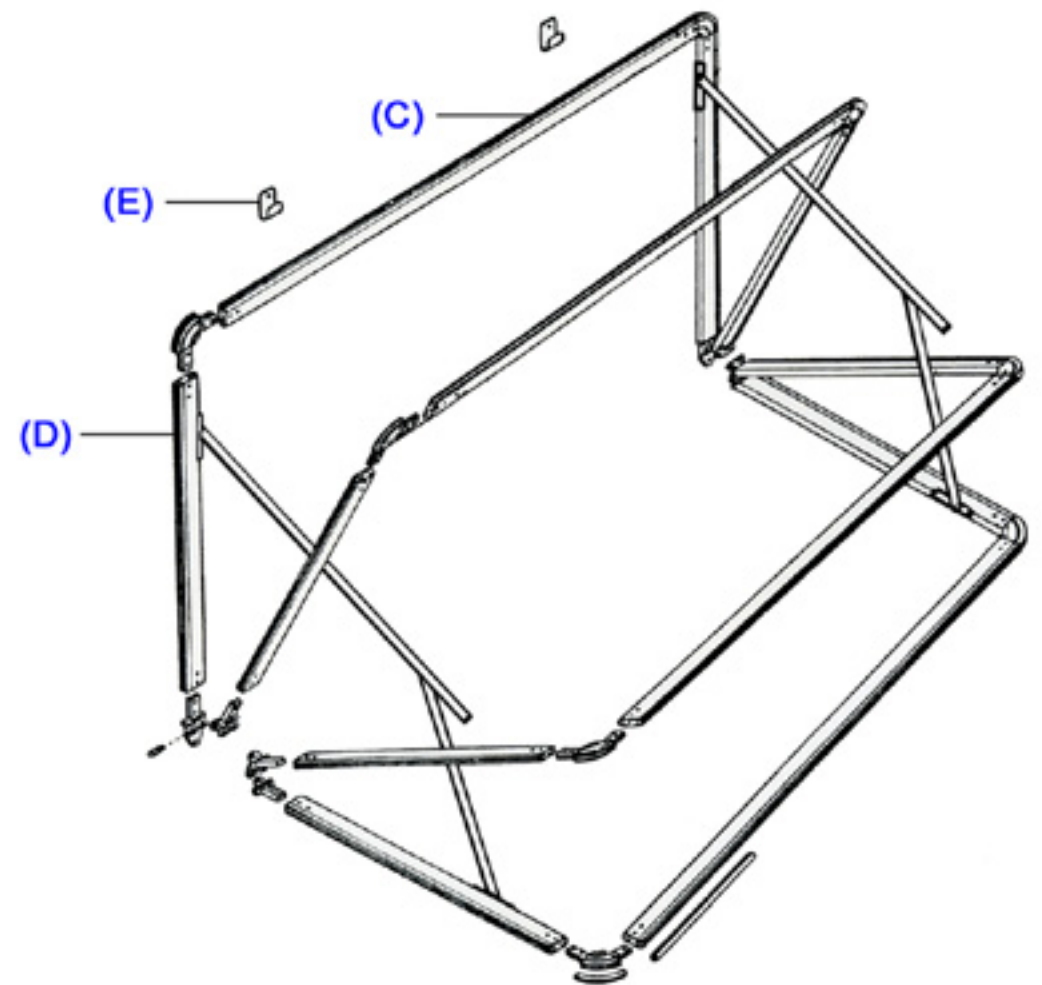


# Awning Measuring & Ordering Instructions

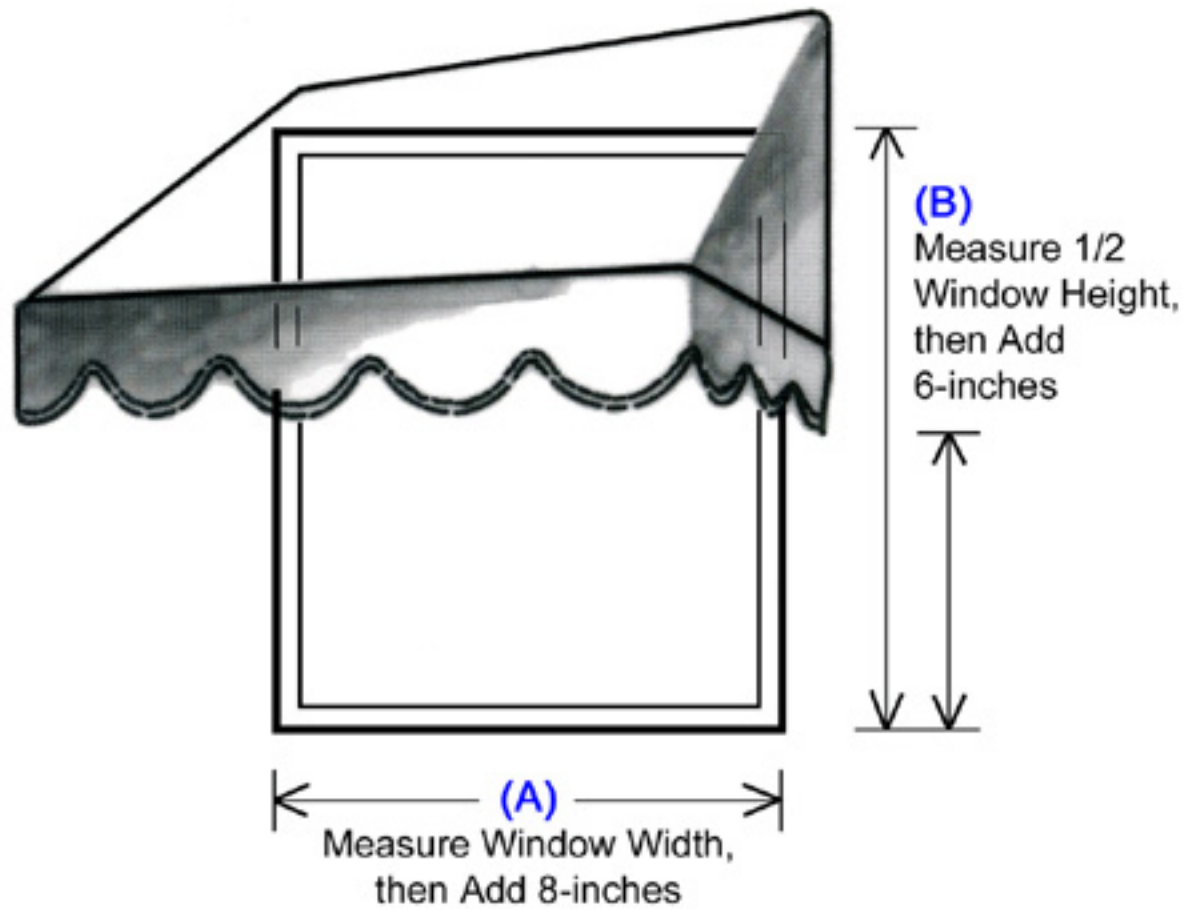

1. Measure the outside to outside Width **(A)** of the window framing (including any window moldings and/or trim), then add at least 8-inches.
2. For the Height **(B)**, measure half of the window height including any window moldings and/or trim, then add at least 6-inches.
3. The top Headbar frame **(C)** and "U" shaped Mounting Brackets **(E)** require 2-1/4 inches of mounting space.

## NOTES:

- The vertical Awning frame with hinged Wingstop **(D)** measures 2-3/4 inches wide.
- Make sure the mounting area is clear of all obstacles, light fixtures, eave overhangs, etc.
- These instructions provide maximum blockage from the sun. For less blockage, do not add 6-inches to the height measurement.
- The Awning Projection size is identical to the Awning Height dimension.
- Assembly hardware and "U" shaped Mounting Brackets are included.
- Mounting and Anchoring hardware not included. Consult with local hardware representatives for the best mounting and anchoring solutions.