


Retractable Awning Measuring & Ordering Guidelines

1. Determine the width of the awning (A). (This requires a clear span with no obstructions, such as light fixtures, downspouts, etc.)
2. Awning will require 8" of mounting space (B).
3. A minimum of 7'-6" (90") is required from the deck or patio to the top of the mounting space (C).
4. Select the projection that best fits your needs (D).
5. Retractable awnings are available in ALL Sunbrella Awning Grade solid and striped fabric colors; select the one that best compliments your needs.

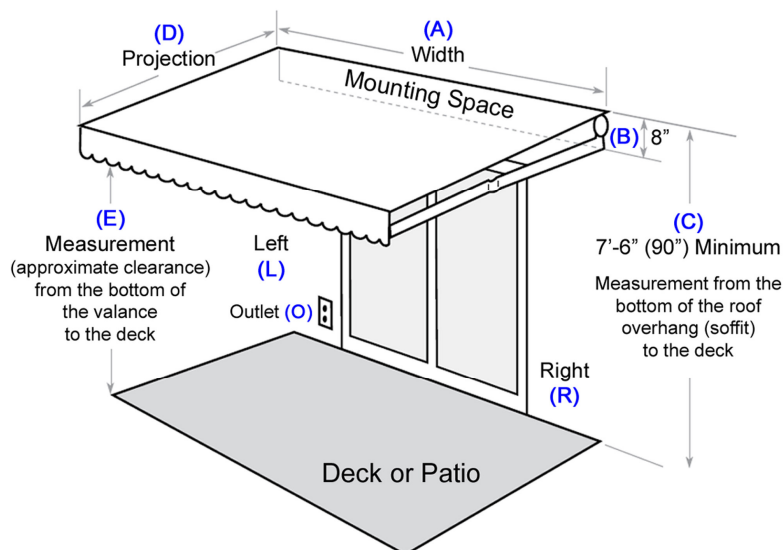

OPERATIONS: Facing the house, please specify the side (L) or (R) you want the standard crank handle or motor. If no selection is made, the lateral arm awning will ship with right hand operation (R). A plug-in power outlet (O) is required for motorized units.

IMPORTANT SAFETY & USAGE NOTICE


Retractable awnings are designed for solar protection only. They are NOT designed for use in rain, snow, ice or wind conditions. These awnings are also NOT designed for commercial applications.

Retractable Awnings are not returnable. Verify ALL information before ordering.

Patio Awning Mounting Height Chart

C = Measurement from top of mounting space to deck	Projection				
	5'-9"	6'-11"	8'-6"	10'-2"	11'-8"
7'-6" (90")	72"	72"	72"	70"	69"
8'	78"	78"	78"	76"	75"
8'-6"	84"	84"	84"	82"	81"
9'	90"	90"	90"	88"	87"
9'-6"	96"	96"	96"	94"	93"
10'	102"	102"	102"	100"	99"

- Chart above denotes the approximate clearance with the pitch set in the factory set position.
- 3'-7" Standard Crank Handle included with all wall mounts, unless otherwise specified.
- 7' Crank Handle included with all roof mount kits.

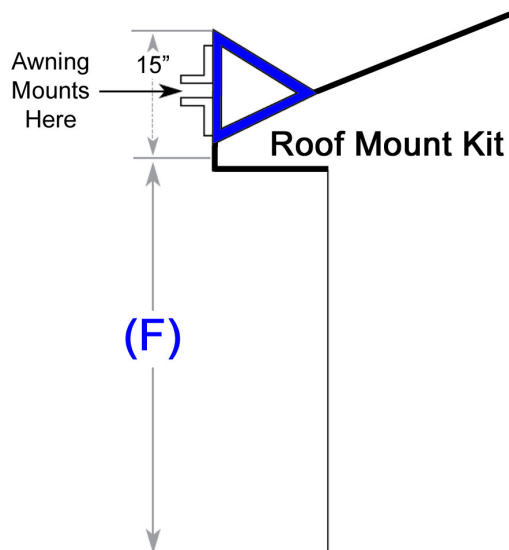

ROOF MOUNT KIT SHOULD BE USED WHEN:

1. There is insufficient space to mount the awning (8") or when wall obstructions (ie. downspouts or light fixtures) are in the way.
2. More height is desired between the bottom of the awning valance and the deck or patio (E).

To determine the mounting height when a roof mount kit is used:

- Measure the distance from your deck or patio to the roof line edge or the top of the fascia (F) and add 15". This height will now become the (C) measurement.
- Awning cannot be mounted to the fascia.