

STANDARD Spear Awning Assembly & Installation Instructions



Thank you for choosing Awnings.com, a division of Eide Industries, Inc.



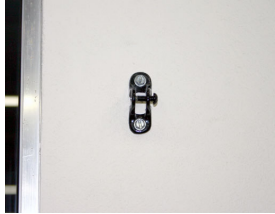



Careful planning and patience are the keys to a safe and successful installation. Please review all steps of these instructions before beginning the assembly and installation of the spear awning. If you are not able to perform this installation and/or do not have the appropriate equipment and tools, we recommend hiring a local handyman or contractor for assistance.

PRE-INSTALLATION NOTES

- Required tools: Ladder, drill, adjustable wrench, screwdriver, level, tape measure, pencil and caulking or weather sealant (if necessary). Be sure to read, understand, and follow all the safety rules that come with any power tools.
- Take inventory of the parts per the packing list to ensure that all pieces are present.
- Mounting fasteners and anchors are not included as the building exterior varies. We recommend consulting with a local contractor or hardware merchant for the best mounting solutions.
- To avoid smudges or blemishes, be sure your hands are clean before handling fabric.
- Handle the fabric and frame carefully during the installation process to avoid damaging the cover or scratching the frame. (Fabric smudges, punctures and other installation damages are not covered by the warranty.)
- A second person is recommended to assist with the installation.

Assembly and Installation Instructions

<p>Center the Headrail on the opening. Drill and Fasten the center.</p>	
<p>Level the Headrail and install additional fasteners on approximately twelve (12) inch centers.</p>	

<p>Measure down directly below the ends of the Head bar and mark the required mounting location for the Support Arm Hinges. (The optimal awning projection for the Support Arms is designed with a 60-degree angle. In reference to a time clock, this is 2 o'clock.)</p>	
<p>Mount the hinges. Use appropriate caulking of the fasteners to prevent leakage.</p>	
<p>Measure up _____ inches from the Support Arm Hinges to mount the Brace Hinges.</p>	
<p>Slide awning cover welting into Headrail on the Head Bar and carefully pull through. Do NOT trim excess Welt Tube until after the awning is completely installed. Some cover re-alignment may be necessary.</p>	
<p>Fabric will hang from Headrail.</p>	
<p>Insert Front Bar into pocket.</p>	

Slide Support Brace Fittings onto Support Arms



Insert Support Arms into Front Bar and attach to Hinges.



Adjust Support Braces to tighten fabric.



Spear Awning without Support Braces



Spear Awning with Support Braces

Thank you for purchasing a spear awning from Awnings.com, a division of Eide Industries, Inc. If you have any questions, please call us at (562) 402-8335.