


BEADLOCK WHEEL NOTIFICATION

OUTER TIRE BEAD IS PINCHED IN BETWEEN THE
OUTER LIP OF WHEEL AND BEADLOCK RING.
YELLOW = BEADLOCK RING SPACER (IF APPLICABLE)

INNER TIRE BEAD GOES HERE

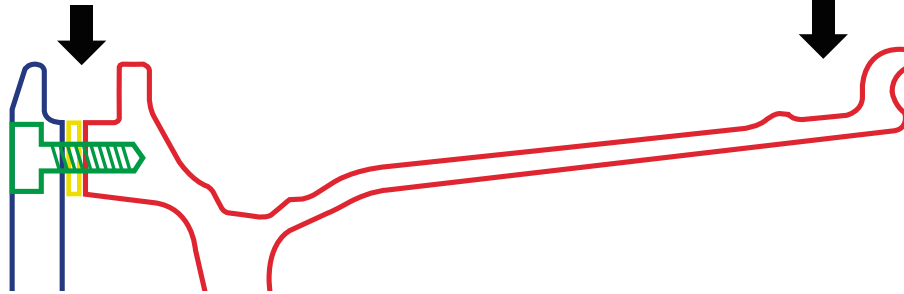

***BEADLOCK WHEELS ARE DESIGNED, ENGINEERED AND INTENDED FOR OFF-HIGHWAY USE ONLY AND ARE NOT DOT APPROVED.**

***BEADLOCK WHEELS ARE NOT SUBJECT TO ANY STRUCTURAL OR COSMETIC WARRANTY BECAUSE OF THE CONDITIONS THESE WHEELS ARE INTENDED TO BE USED FOR.**

***IT IS REQUIRED THAT PROFESSIONAL TIRE/WHEEL INSTALLERS ARE USED FOR THE MOUNTING PROCESS.**

*****METHOD IS NOT RESPONSIBLE FOR DAMAGE CAUSED BY IMPROPER ASSEMBLY*****

Below are a few important steps to follow in the mounting and use of beadlock wheels:

- Use only Method Race Wheels approved hardware kits (Grade 8 bolts & washers) for the attachment of the beadlock ring to the wheel.
- Make sure there are no excess rubber protrusions (mold flash) on the bead area of the tire.
- Make sure tire bead seats evenly to outside flange of wheel.
 - A beadlock ring spacer may be required for larger tires. Please call to confirm fitment prior to assembly.
- Always use a *STAR PATTERN* when attaching and tightening mounting bolts to the wheel.
 - Start bolts by hand, at least two full turns.
 - Using a calibrated torque wrench, tighten each bolt to half the required torque specification.
 - Using a calibrated torque wrench, tighten each bolt to the required torque specification listed below.

GRADE 8 HARDWARE FINAL TORQUE SPECS

WHEEL SIZE	CAST WITH ANTI-SEIZE	CAST NO ANTI-SEIZE	FORGED WITH ANTI-SEIZE	FORGED NO ANTI-SEIZE
12" - 14"	5-8 LB-FT	7-12 LB-FT	X	X
15" - 17"	15-20 LB-FT	18-24 LB-FT	17-23 LB-FT	20-27 LB-FT

FOR TECHNICAL QUESTIONS PLEASE CALL 866.779.8604