Over Armour Offroad

2515 Bypass Rd. Flemingsburg, KY 41041
606-845-7439

Instructions for Installation and Care of
Yamaha Viking
Draft Panel
YA-VIKING-DPNL

CAUTION: Do not smoke inside the cab or expose the enclosure to direct flames. Product is FLAMMABLE.
Be sure to read these instructions thoroughly before opening and installing the enclosure. The installation is best done when ambient temperature is 70°F or warmer. If installed in cold weather, warming the adhesive Velcro strips before installation is recommended.

Top:

2" Self adhesive Velcro Hook: ----------	1 each	55” long
“ “	2 each	3” long
1” Self adhesive Velcro Hook: -----------	1 each	55” long

1. Draft Panel
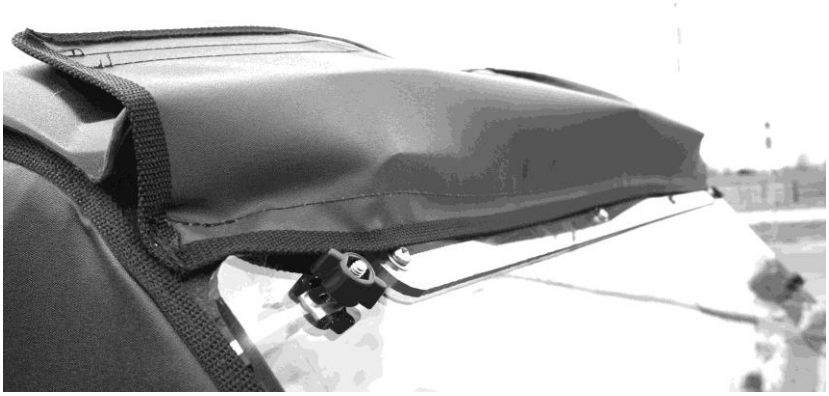
- **a.** To install the draft panel you take the two 55” adhesive Velcro strips and adhere them to the top of your windshield and to the top of your factory hard top.
- **b.** The side with the sewn pinches will be the on to go on top of your roof.
- **c.** See photos below